


LAWN AREA PREPARATION: SECTION

SCALE: 1"=1'-0"

PREPARATION

1. LOOSEN TOPSOIL OF LAWN AREAS TO MIN DEPTH OF 6". REMOVE STONES OVER 1" AND STICKS, ROOTS, RUBBISH, AND EXTRANEIOUS MATTER.
2. GRADE LAWN AREAS TO A SMOOTH, FREE DRAINING, EVEN SURFACE WITH A LOOSE, MODERATELY COARSE TEXTURE. ROLL AND RAKE, REMOVE RIDGES, AND FILL DEPRESSIONS AS REQUIRED TO DRAIN.
3. APPLY LIMESTONE AT RATE DETERMINED BY THE SOIL TEST TO ADJUST PH OF TOPSOIL TO NOT LESS THAN 6.0 OR MORE THAN 6.8. DISTRIBUTE EVENLY BY MACHINE AND INCORPORATE THOROUGHLY INTO TOPSOIL.
4. APPLY FERTILIZER TO TURF AT A RATE TO SATISFY SOIL ANALYSIS RECOMMENDATIONS.

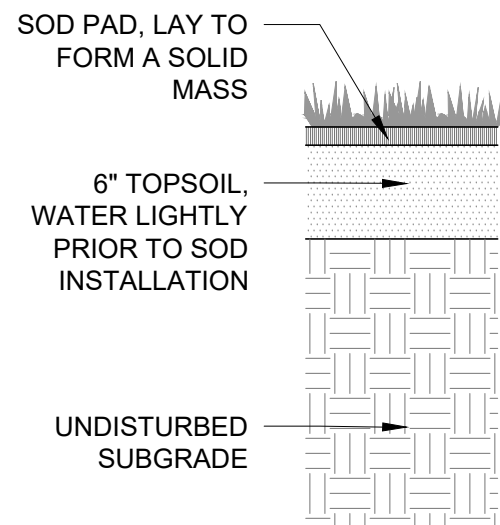

SODDED LAWN: SECTION

SCALE: 1"=1'-0"

INSTALLATION: SODDED LAWN

1. SOD TO BE APPROVED NURSERY GROWN BLEND OF SPARTAN HARD FESCUE OR RELIANT HARD FESCUE. SOD CONTAINING COMMON BERMUDAGRASS, QUACKGRASS, JOHNSONGRASS, POISON IVY, NUTSEGE, NIMBLEWILL, CANADA THISTLE, TIMOTHY, BENTGRASS, WILD GARLIC, GROUND IVY, PERENNIAL SORREL OR BROMEGRASS WEEDS WILL NOT BE ACCEPTABLE.
2. LAY SOD TO FORM A SOLID MASS WITH TIGHTLY FITTED JOINTS. BUTT ENDS AND SIDES OF SOD STRIPS. DO NOT OVERLAY EDGES. STAGGER STRIPS TO OFFSET JOINTS IN ADJACENT COURSES. REMOVE EXCESS SOD TO AVOID SMOTHERING OF ADJACENT GRASS.
3. MAKE SOD PAD TOP FLUSH WITH ADJACENT CURBS, SIDEWALKS, DRAINS, AND SEEDED AREAS.
4. DO NOT LAY DORMANT SOD OR INSTALL SOD ON SATURATED OR FROZEN SOIL.
5. INSTALL INITIAL ROW OF SOD IN A STRAIGHT LINE, BEGINNING AT BOTTOM OF SLOPES, PERPENDICULAR TO THE DIRECTION OF THE SLOPED AREA.
6. PEG SOD ON SLOPED GREATER THAN 3 TO 1 TO PREVENT SLIPPAGE.
7. WATER SOD THOROUGHLY WITH A FINE SPRAY IMMEDIATELY AFTER LAYING.
8. ROLL WITH LIGHT LAWN ROLLER TO ENSURE CONTACT WITH SUB GRADE.
9. WATER UNTIL ESTABLISHED.